
Whirlpool

VENTILATION PARTS

36" RANGE HOOD (Use with Gas or Electric Range)

For Model: GZ7736XGS0 (Brushed Aluminum)

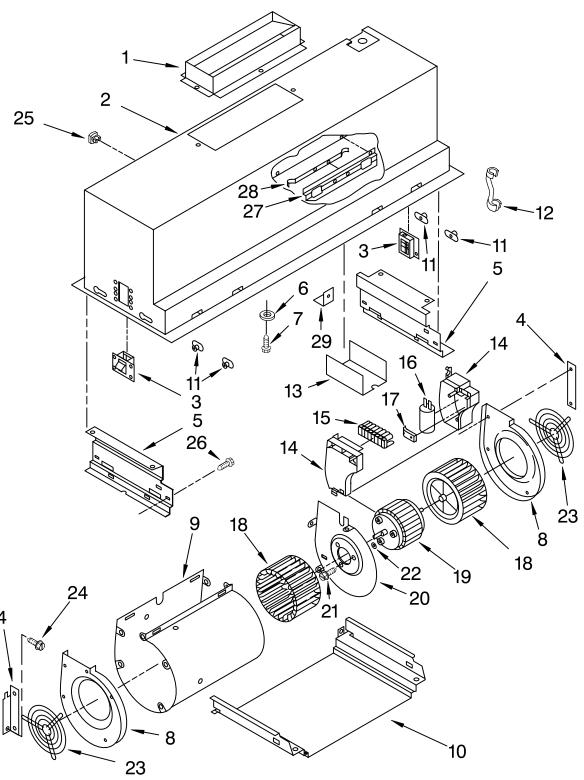

VENTILATION PARTS


For Model: GZ7736XGS0 (Brushed Aluminum)

Illus. No.	Part No.	DESCRIPTION
1 2	4360001	Damper, Canopy
2		Canopy,
2	4260002	Non-serviceable
3 4	4360002	Support, Canopy (2) Bracket, Blower
	4360003	Left Side
_	4360054	Right Side
5	4000004	Support, Housing
	4360004	Left Side
^	4360039	Right Side
6 7	4360005	Washer
<i>7</i> 8	4360006	Screw, 5 x 1/2 (3)
Ö	4360007	Endcap Blower Left
	4360007	Right
9	4360003	Housing, Blower
10	4360009	Support, Housing
11	4360063	Bushing (4)
12	4360062	Strain Relief
13	4360357	Plate, Mounting
14	1000007	Cover, Terminal
	4360060	Left Side
	4360056	Right Side
15	4360057	Terminal
16	4360058	Capacitor
17	4360059	Bracket, Capacitor
18		Wheel, Blower
	4360049	Left Side
	4360055	Right Side
19	4360040	Motor
20	4360052	Plate, Motor
21	4360050	Screw 4 x 8 (3)
22	4360051	Washer (3)
23	4360064	Grille, Blower (2)
24	4360067	Screw 6 x 10 (2)
25	4360074	Clip (2)
26	4360048	Pin, Filter (2)
27	4360071	Bracket, Filter
28	4360072	Spring, Filter (2)
29	4360120	Bracket (6)

2 4360354

DOOR AND CONTROL PARTS

For Model: GZ7736XGS0 (Brushed Aluminum)

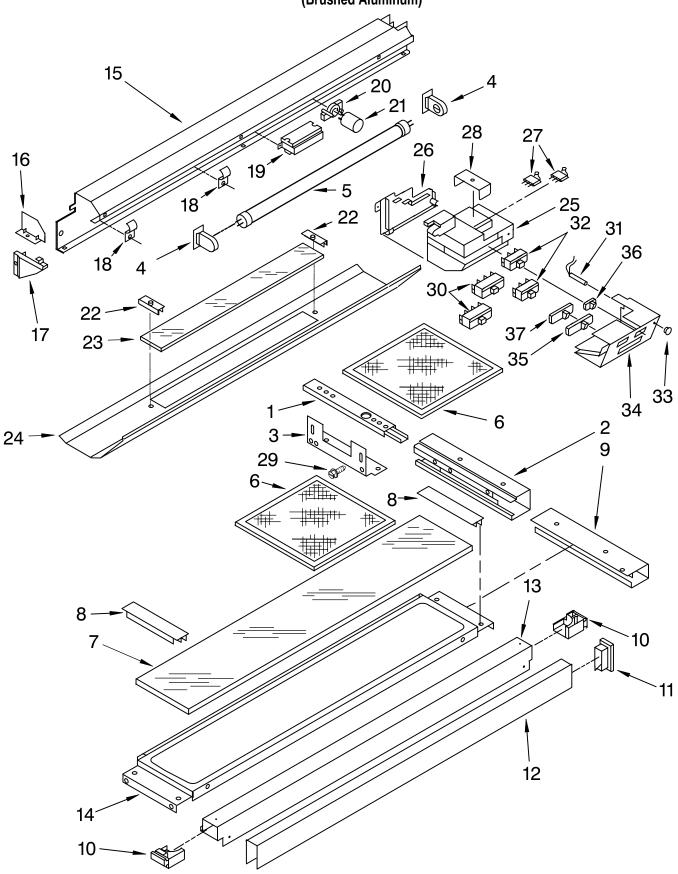

4360354 3

DOOR AND CONTROL PARTS

For Model: GZ7736XGS0 (Brushed Aluminum)

Illus. No.	Part No.	DESCRIPTION
1 2	4360010	Guide, Door (2)
2	4260044	Guide, Housing
	4360011 4360037	Left Side Right Side
3	4360037	Support, Guide
3 4	4360012	Socket, Lamp (2)
5	4360014	Lamp
6	4360015	Filter
7	4360016	Glass, Door
8	4360017	Brace, Glass (2)
9		Frame, Door
	4360018	Left Side
4.0	4360024	Right Side
10	4000000	End Cap, Door
	4360069	Left Side
11	4360070	Right Side End Cap, Handle
11	4360020	Left Side
	4360020	Right Side
12	4360360	Handle
13	4360128	Bracket, Handle
14	4360019	Baffle, Door
15	4360038	Support, Light
16	4360066	End Plate
17	4360043	Bracket, Light
18	4360044	Clamp, Wiring
19	4360045	Ballast, Lamp
20 21	4360047	Receptacle
22	4360260 4360041	Starter Brace, Glass (2)
23	4360041	Lens, Light
24	4360068	Frame, Lens
25	4360033	Base, Switch
26	4360034	Cover, Base
27	4360035	Switch (2)
28	4360036	Cover, Switch
29	4360073	Screw
30	4360025	Switch, Light (2)
31	4360026	Light, Indicator
32	4360027	Switch, Fan (2)
33 34	4360028 4360029	Lens, Indicator Cover, Switch
3 4 35	4360029	Knob, Control
36	4360030	Knob, Control
37	4360031	Knob, Light
٠.	.000002	

LITERATURE PARTS

LIT883141 Installation Instructions LIT4360082 Wiring Diagram

ACCESSORY PARTS

883140 Non-Vent Kit 883143 Front Kit (Black) 883145 Front Kit (White)

4 4360354